


1D Laser Barcode Scanner User Manual

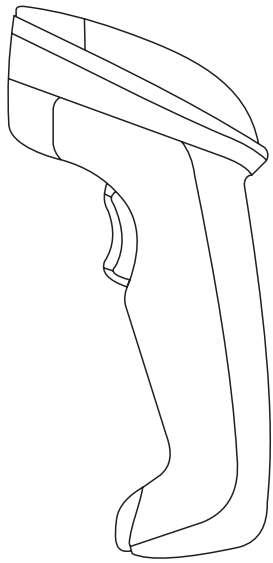

 **Version**

V2.0

This manual is simplified, for detailed manual information please download the completed user manual from our website or obtain it from our distributor.

Factory Default



Note: Default interface: USB-HID

Setting Procedure:
Scan required bar codes

Example: Factory default, USB-HID, add suffix "Enter" barcode as below

1 Factory Default



2 Enter



Interfaces



USB-IHD



USB-COM



PS2



RS232

Scan Mode



Manual



Continuous



Automatic Flashing

Auto-Induction



ON



OFF

Buzzer



OFF



ON



Low



High

Image Inverted



Direct



Reverse

Keyboard Language



USA



UK



French

Suffix Setting



Enter



Enter&Line feed



Cancel

USB-COM, RS232 Baud Rate Setting



4800



9600



19200



38400



57600



115200

Barcode Setting



Enable Code 39



Disable Code 39



Enable UPC-A



Disable UPC-A



Enable UPC-E



Disable UPC-E



Enable EAN-13



Disable EAN-13



Enable EAN-8



Disable EAN-8



Enable Code-93



Disable Code-93



Enable Code-128



Disable Code-128



Enable Codabar



Disable Codabar



Enable Interleaved 2 of 5



Disable Interleaved 2 of 5



Enable Industrial 25



Disable Industrial 25



Enable MSI



Disable MSI



Enable Plessey



Disable Plessey



Enable Code-11



Disable Code-11



Enable Matrix 2 of 5



Disable Matrix 2 of 5



Enable Postcode 25



Disable Postcode 25



Enable Aviation 25



Disable Aviation 25



Enable GS1 Omnidirectional



Disable GS1 Omnidirectional



Enable GS1 Limited



Disable GS1 Limited